



# Installation Guidance

## Connolly Flange Dowel Box

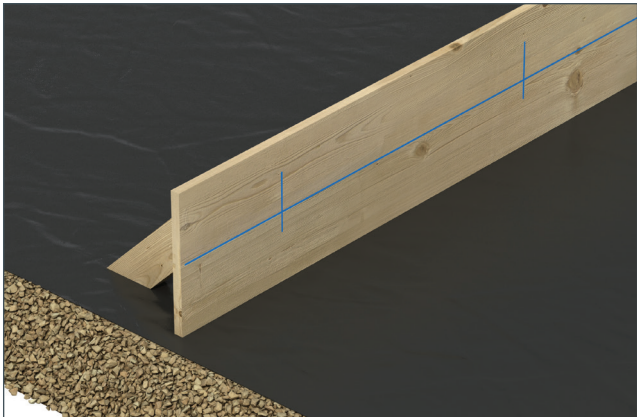


### Step 1

Mark centre line of the Connolly Flange Dowel Box and dowel spacing on the formwork. Flange Dowel Box is normally installed at the mid-height of the slab.

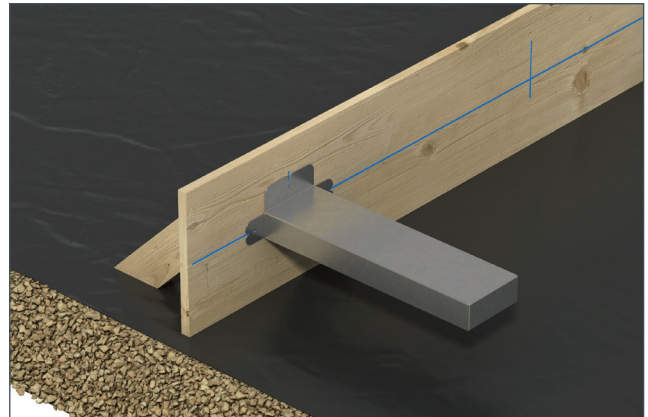

### Step 2

Place the Connolly Flange Dowel Box at the marked location by using the V-Notches at the top and both sides to ensure correct placement.

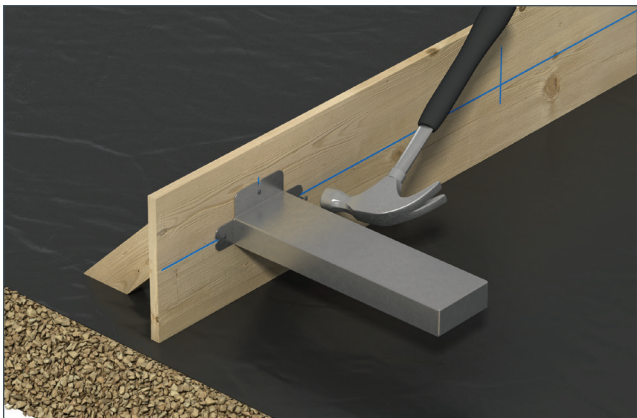

### Step 3

Nail the Connolly Flange Dowel Box to the formwork using three nails.



### Step 4

After pouring the first slab remove the formwork. After removal of formwork, Connolly Flange Dowel Box will be exposed as shown above.



### Step 5

Firmly place the square dowel into the insertion hole in the flange dowel box by punching through the sticker as shown above.



### Step 6

Once dowels have been correctly positioned, install the specified reinforcement and carry out the next pour. For expansion joints, install compressible material before second pour.